# Basic Knots for Every Fisherman!!

#### The Rapala Knot

1. Tie an overhand knot. Leave 5" of free end. Run free end through the eyelet.

2. Run free end back through overhand knot.

Wrap free end around standing part of line 3 times.

**1.** Thread free end through <u>back</u> of overhand knot.

**5.** Pass free end through loop that is formed.

6. Moisten line and draw up tight. Trim excess.

For Pre-Tied leaders, follow the steps of the Rapala Knot without Rapala on line. Tie hook to other end of desired length of leader.

Single Clinche Knot




Improved Clinche Knot



**Double Clinche Knot** 




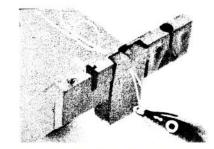

In Tying the Rapala Knot or Leaders, Insert Line in Ty-Alf™ As Shown.

#### CAUTION

Do not oil or get any foreign liquids, insect repellent, spray lubricants, etc., on your Ty-All™. It is constructed of a self lubricating material. Clean your Ty-All™ with warm soapy water when needed.

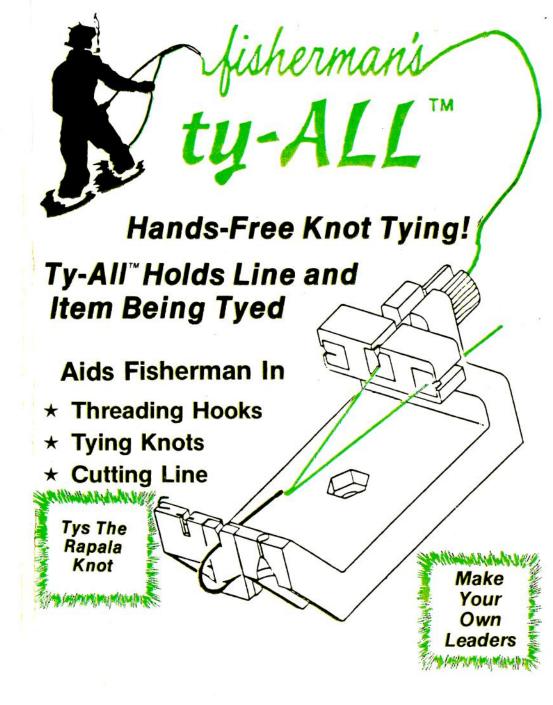

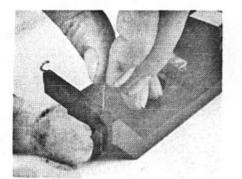


Fig. 1



Fig. 5

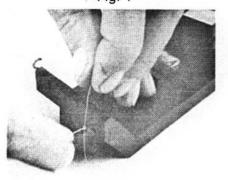


Fig. 2



Fig. 6

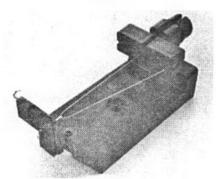


Fig. 3



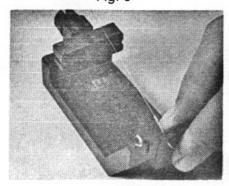


Fig. 7

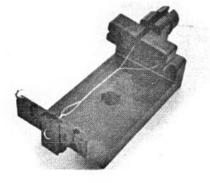

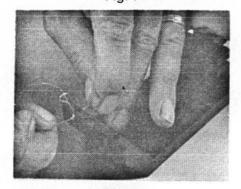

### Operating Your Fisherman's Ty-AIſ™

Threading Hook (fig. 1 & 2) - Hold hook under funnel shaped slot and insert line. Hook will automatically be threaded.

Placing Hook and Line in Fisherman's Ty-All™ (fig. 3) - Place loose end of line in either left or right line holder rubber guide on revolving head. Place hook in rubber hook holder slot with line from rod and reel running thru knob and revolving head of Ty-All™.


Putting turns in line (fig. 4) - Turn knob on Ty-All™ desired number of turns, (five or six for clinche knot). Remove loose end of line from revolving head and insert thru loop formed in line next to hook eye. Fig. 5.


Tying the Knot (fig. 6) - Hold loose end of line with thumb and then pull line connected to fishing pole (fig. 7) for a perfect knot everytime.

Built-in Cutter (fig. 8) - After tightening knot, cut off excess line from loose end.

#### MOUNTING

Your Fisherman's Ty-All™ complete with mounting bolt and wing nut for mounting on your tackle box. minnow bucket, boat deck, boat seat, etc. To Mount, drill 14" hole. place bolt through top of Ty-All™ and into recessed hole, attach wing nut and tighten.

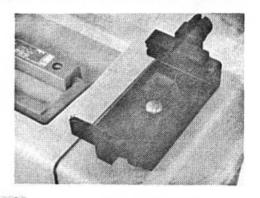

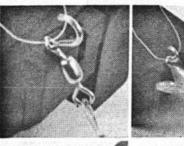







## Tying Knots On Other Than Hooks

To hold flies, poppers, jigs, etc., place hook to the side of the hook holder with hook point inserted into soft rubber hook holder.

To ty knots onto lures, snap swivels, leaders, etc., place the eye of hook or swivel over stainless steel pin to prevent swivel from turning when turns are placed in line. Finish knot in same manner as described in basic steps.